TRIPLE STREAM

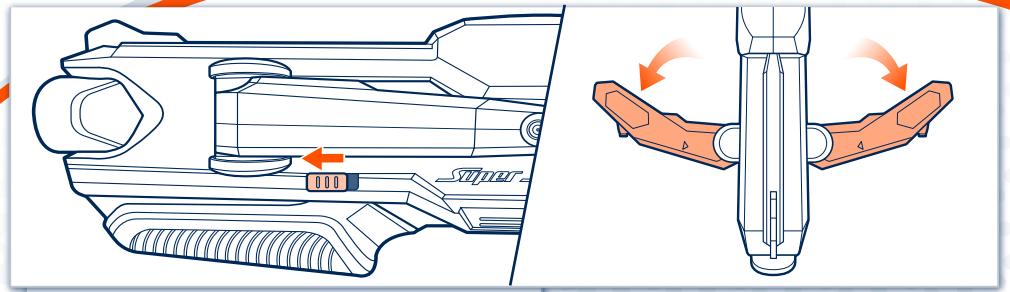

1 Slide switch to open crossbow arms.

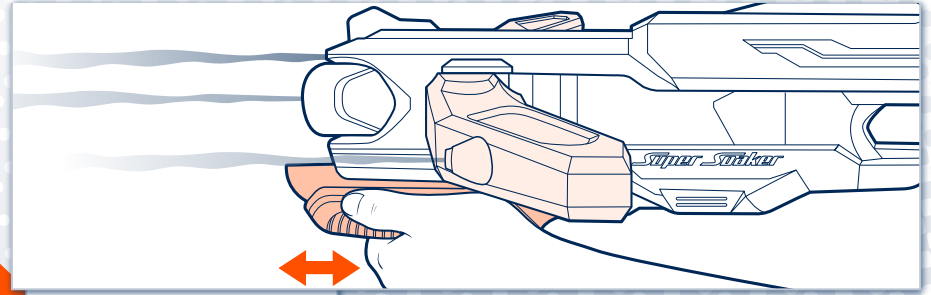

2 Pump to fire.

Product and colors may vary.
YouTube and the YouTube logo are trademarks of Google Inc.
© 2013 Larami Ltd.
®* and/or TM* & © 2013 Hasbro.
All Rights Reserved.
TM & ® denote U.S. Trademarks.

A4836 PN 7394300000

Hey NERF Nation!
Join us online and keep up with the latest and greatest NERF news!
Find us on Facebook NERF.COM WATCH ON YouTube
Ask a parent before going online.

Questions? Call 1-800-327-8264

NERF Super Soaker

⚠ CAUTION:
Do not aim at eyes or face.
TO AVOID INJURY: Use only clean tap water.

AGES 6+

TRISTRIKE CROSSBOW

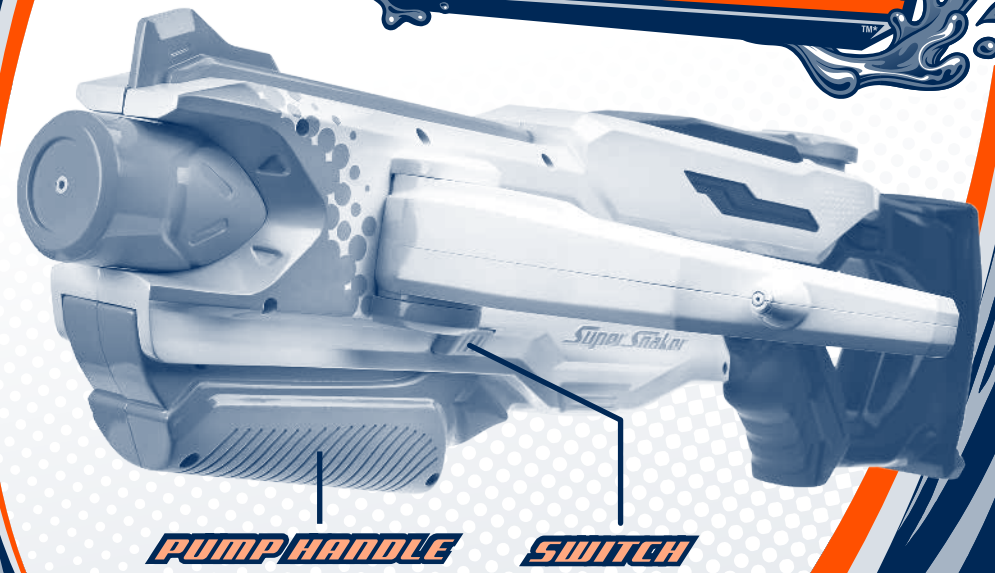

TO PLAY

BEFORE FIRST USE:

SLIDE SWITCH FORWARD AND HOLD IT IN PLACE. MANUALLY OPEN ARMS. RELEASE SWITCH AND CLOSE ARMS.

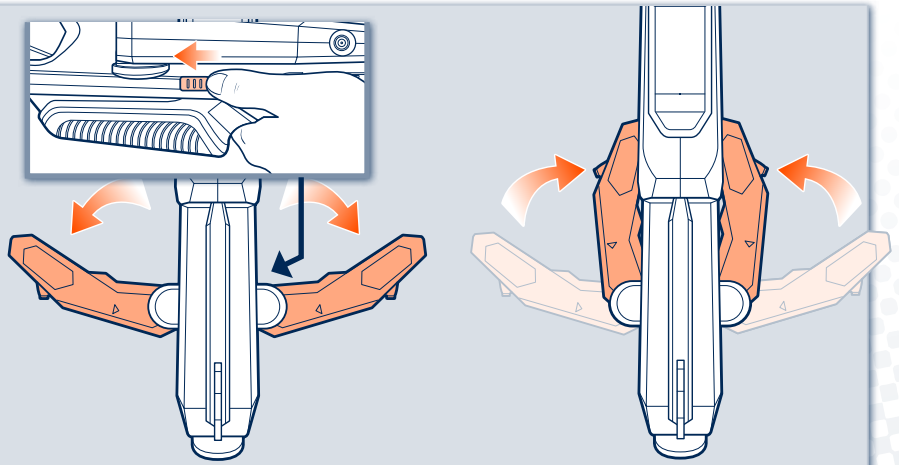

SINGLE STREAM

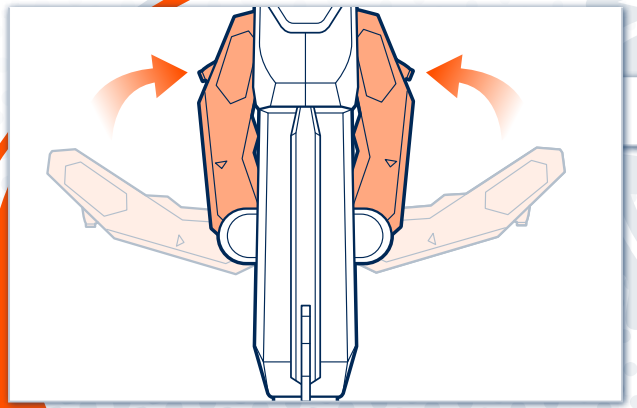

1. Close crossbow arms.

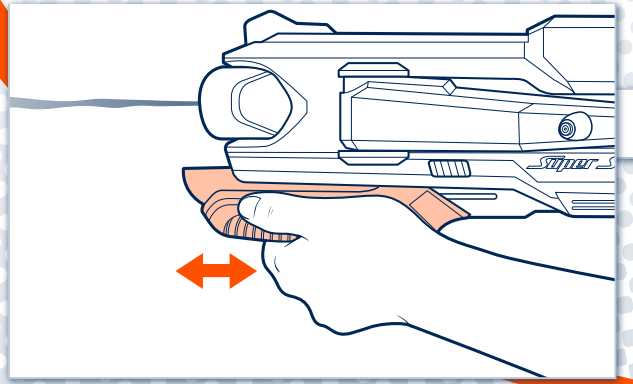

2. Pump to fire.

1

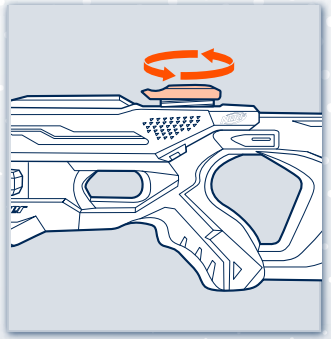

2

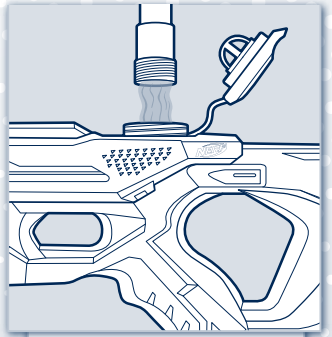

Fill tank with clean, clear water.

3